


## INSTRUCTIONS FOR: 88-91 EF CRX & CIVIC CHASSIS ADAPTER

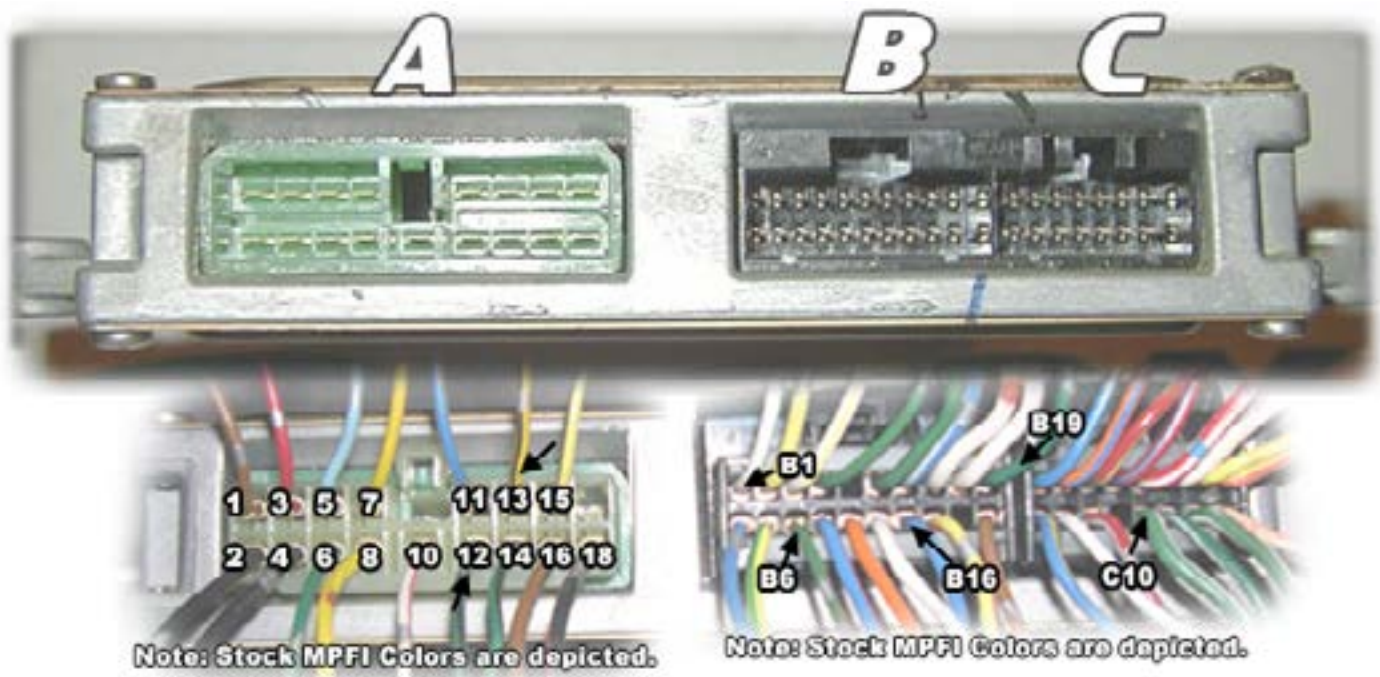

THESE ARE THE WIRE COLOR NAMES PRINTED ON OUR SOLID WHITE-WIRED CHASSIS ADAPTERS:

<u>LOOSE WIRES</u>	<u>FUNCTION</u>
YEL/BLK	12v+, Power
GRN/BLU	Fuel Pump
<b>WIRES BELOW NOT NECESSARY FOR ENGINE START:</b>	
WHT/BLU	VBU, Backup power
GRN/ORN	MIL, Check eng. light
BLU/WHT	VSS, Vehicle Speed
GRN/RED	ELD, Electronic Load

WHT/BLK - Extra  
ORN/BLK - Extra

Some extra wires are run through the harness to allow sensor additions later on.

TAP EACH LOOSE WIRE INTO ITS CORRESPONDING OBDO WIRE

<u>OBDO LOCATION</u>	<u>OBDO COLOR (TO TAP)</u>
A13	Yellow/Black
A12	Green/Black
(We suggest that you connect them pre-start anyway.)	
B1	White/Green
B6	Green/Orange
B16	Yellow/Red
B19	Green/Red

If there are shock tower plugs on your harness, simply pull the shock tower plugs from the engine bay into the interior and connect.

The BROWN/WHITE wire is your SCS (Service Check Signal) - Simply ground it to check codes