


INSTRUCTIONS FOR:

EG 92-95 & DC 92-93 CHASSIS ADAPTER

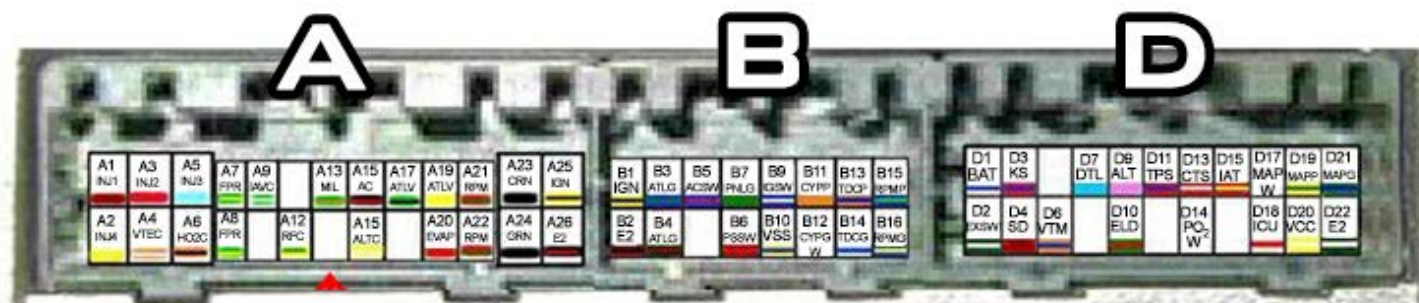

(This diagram shows the stock OBD1 wire colors and their function, see it in color on Rywire.com)

These wires are meant to be tapped into the wires on your stock OBD1 ECU Plugs.

THESE ARE THE WIRE COLOR NAMES PRINTED ON OUR SOLID WHITE-WIRED CHASSIS ADAPTERS:

WIRE TO CONNECT	FUNCTION
GRN/BLU	Fuel Pump
BLU/WHT	VSS (92-93 Integras ONLY)
WIRES BELOW NOT NECESSARY FOR ENGINE START:	
WHT/BLU	VBU: 12v+ constant (ECU memory)
GRN/ORN	MIL (Check Engine Light)
BRN/WHT	SCS (Service Check Signal)
GRN/RED	ELD (Electronic Load Detector)

WHT/BLK - Extra
ORN/BLK - Extra

Some extra wires are run through the harness to allow sensor additions later on.

THIS IS THE COLOR OF THE WIRES ON YOUR STOCK ECU PLUGS

STOCK POSITION	STOCK COLOR (TO TAP)
A7	Green/blue or Green/yellow
B10	Blue/White or Orange
(We suggest that you connect them pre-start anyway.)	
D1	White/Blue
A13	Green/Orange
D4	Brown/White or Brown
D10	Green/Red or Green/black